

## LONDON BARBER WILSONS & CQ EST. 1905

## Preparing for installation

Please check the two boxes and delivery note to ensure all items are present and correct. Should there be any damaged or missing items, in accordance with our terms and conditions: you must notify us within 3 days of delivery of any potential damage or loss from transportation.

All our water fittings should be installed by a qualified plumbing engineer and must comply with current water regulations. Before installation, please consider the need for longer-term access to the area for routine maintenance, for Instance, fitting isolation valves to the inlet feeds is recommended for ease of maintenance.

To avoid damage to the tap cartridges, flush the system prior to installation ensuring that all debris and dirt is cleared from the pipework. This is essential for the longevity of our products, failure to take these precautions will affect the warranty.

It is essential that due care is taken to ensure that products are well protected before, during and after the installation process: The use of gloves will ensure that products are not marked by soiled fingers, be especially mindful of this when installing living finishes.

Ensure spanners and other tools are suitably lined to avoid damage to plated or polished surfaces, nuts, bolts, screws, etc. If cutting pipework, take care when securing so as not to damage the surface on plated or polished finishes.

Installation Guidance for Regent 1010 Mixers with Flange Unions

- Remove tap and fittings from packaging.
- Ensure the flange is fully screwed up and that the rubber gasket is underneath, to ensure a cushion between the flange and surface.
- Feed the threaded part of the union through the work surface and attach the fixing nut to secure the tap in place.
- Water can now be connected once the pipes have been thoroughly flushed through.



## LONDON BARBER WILSONS & CQ EST. 1905

After installation, allow the tap to run for a while to ensure all the connections are suitably sealed/dry and the tap is functioning correctly.

**Maintenance**: General maintenance can be performed by removing the aerator holder at the base of the spout and removing any lime scale build up that may collect at the back of the aerator.